

*ARMY RESEARCH LABORATORY*



## **Real-Time Detection of Chemical Warfare Agents Using Multi-Wavelength Photoacoustics**

**by Kristan Gurton, Melvin Felton, and Richard Tober**

**ARL-TR-4782**

**April 2009**

## **NOTICES**

### **Disclaimers**

The findings in this report are not to be construed as an official Department of the Army position unless so designated by other authorized documents.

Citation of manufacturer's or trade names does not constitute an official endorsement or approval of the use thereof.

Destroy this report when it is no longer needed. Do not return it to the originator.

# **Army Research Laboratory**

Adelphi, MD 20783-1197

---

**ARL-TR-4782**

**April 2009**

---

## **Real-Time Detection of Chemical Warfare Agents Using Multi-Wavelength Photoacoustics**

**Kristan Gurton and Melvin Felton**

Computational and Information Sciences Directorate, ARL

**Richard Tober**

Sensors and Electron Devices Directorate, ARL

# REPORT DOCUMENTATION PAGE

*Form Approved  
OMB No. 0704-0188*

Public reporting burden for this collection of information is estimated to average 1 hour per response, including the time for reviewing instructions, searching existing data sources, gathering and maintaining the data needed, and completing and reviewing the collection information. Send comments regarding this burden estimate or any other aspect of this collection of information, including suggestions for reducing the burden, to Department of Defense, Washington Headquarters Services, Directorate for Information Operations and Reports (0704-0188), 1215 Jefferson Davis Highway, Suite 1204, Arlington, VA 22202-4302. Respondents should be aware that notwithstanding any other provision of law, no person shall be subject to any penalty for failing to comply with a collection of information if it does not display a currently valid OMB control number.

**PLEASE DO NOT RETURN YOUR FORM TO THE ABOVE ADDRESS.**

1. REPORT DATE (DD-MM-YYYY)  April 2009	2. REPORT TYPE  DRI	3. DATES COVERED (From - To)		
4. TITLE AND SUBTITLE  Real-Time Detection of Chemical Warfare Agents Using Multi-Wavelength Photoacoustics		5a. CONTRACT NUMBER		
		5b. GRANT NUMBER		
		5c. PROGRAM ELEMENT NUMBER		
6. AUTHOR(S)  Kristan Gurton, Melvin Felton, and Richard Tober		5d. PROJECT NUMBER		
		5e. TASK NUMBER		
		5f. WORK UNIT NUMBER		
7. PERFORMING ORGANIZATION NAME(S) AND ADDRESS(ES)  U.S. Army Research Laboratory ATTN: AMSRD-ARL-CI-ES 2800 Powder Mill Road Adelphi, MD 20783-1197		8. PERFORMING ORGANIZATION REPORT NUMBER  ARL-TR-4782		
9. SPONSORING/MONITORING AGENCY NAME(S) AND ADDRESS(ES)		10. SPONSOR/MONITOR'S ACRONYM(S)		
		11. SPONSOR/MONITOR'S REPORT NUMBER(S)		
12. DISTRIBUTION/AVAILABILITY STATEMENT  Approved for public release; distribution unlimited.				
13. SUPPLEMENTARY NOTES				
14. ABSTRACT  We present a proof-of-concept study designed to investigate the utility of operating a conventional photoacoustic spectroscopy technique in a “multi-wavelength” mode applied to chemical vapor/aerosols for application of trace species detection and identification. The technique involves propagating three or more laser sources through a non-resonate, flow-through photoacoustic cell. Each laser source is modulated at a different frequency, chosen at some convenient acoustic frequency. A portion of each laser’s power is absorbed by a particular test gas/aerosol that is passing through the PA cell, resulting in an acoustic signal that is found to be proportional to the absorption cross section of the gas/vapor at the particular laser wavelength. A superposition of frequency component (equal to the number of laser wavelengths used), combines with the ambient acoustic noise spectrum and is recorded by an electret microphone housed in the photoacoustic cell. The signal is deconvolved using phase sensitive detection where each component (one corresponding to a particular modulation frequency for a particular laser) is amplified and recorded as function of species concentration. Ratios of the resultant absorption information are used to produce an identifiable metric that remains constant for all concentrations. For the study presented here, we used 3 laser wavelengths all lying in the spectrally rich long-wave infrared (LWIR), i.e., 8.72, 9.27, and 10.35 $\mu\text{m}$ . Test nerve agents simulants include (but not limited to), diethyl phosphonate (DEMP), dimethyl methylphosphonate (DMMP), and diisopropyl phosphonate (DIMP). Measured photoacoustic absorption results compare well with Fourier Transform Infrared (FTIR) analysis that is conducted <i>in situ</i> with the photoacoustic portion of the measurement.				
15. SUBJECT TERMS  photoacoustic, nerve agent, Chem/Bio detection, DEMP, DMMP, DIMP				
16. SECURITY CLASSIFICATION OF:  a. REPORT Unclassified		17. LIMITATION OF ABSTRACT  UU	18. NUMBER OF PAGES  18	19a. NAME OF RESPONSIBLE PERSON  Kristan Gurton
b. ABSTRACT Unclassified		19b. TELEPHONE NUMBER ( <i>Include area code</i> ) 301-394-2093		
c. THIS PAGE Unclassified				

---

## **Contents**

---

<b>List of Figures</b>	<b>iv</b>
<b>1. Background</b>	<b>1</b>
<b>2. Method</b>	<b>1</b>
<b>3. Preliminary Result/Conclusions</b>	<b>4</b>
<b>4. References</b>	<b>9</b>
<b>List of Symbols, Abbreviations, and Acronyms</b>	<b>10</b>
<b>Distribution List</b>	<b>11</b>

---

## List of Figures

---

Figure 1. Flow-through photoacoustic cell .....	2
Figure 2. Multi-wavelength photoacoustic test bed.....	3
Figure 3. AC component of the electret signal sampled at 2.5 kHz while isopropyl vapor is drawn through the photoacoustic cavity .....	5
Figure 4. AC component of the electret signal sampled at 2.1 kHz while isopropyl vapor is drawn through the photoacoustic cavity .....	5
Figure 5. AC component of the electret signal sampled at 1.7 kHz while isopropyl vapor is drawn through the photoacoustic cavity .....	6
Figure 6. Resultant isopropyl vapor absorptance spectra measured simultaneous with the photoacoustic portion of the study (path length 10 cm). Note that for the laser wavelength chosen that the absorptance are very similar in magnitude, i.e., 8.72 $\mu\text{m}$ =2.39, 9.27 $\mu\text{m}$ =2.29, 10.35 $\mu\text{m}$ =2.30. ....	7
Figure 7. New photoacoustic cell design(s). Design a is based on the multiple reflections inherent in integrating spheres. Design b maintains a cylindrical column of vapor (into the page) but now the lasers are brought into the cell perpendicular to the flow in order to limit unwanted laser attenuation. In addition, the right cell shows possible enhancement of the signal by incorporating resonate effects by spacing opposing mirrors at distances on the order of quarter-multiples of the wavelength of sound associated with each modulation frequency. ....	8

---

## 1. Background

---

Currently, there are no reliable means for accurate “real-time” detection and identification of poisonous chemical and/or biological substances that are airborne, either in gaseous or aerosol form. As a result, early-warning systems that are capable of *instantaneous* detection of such materials are badly needed. Because rapid detection and identification is desired, an optically based technique should be considered.

To this end, we propose a new approach based on the detection of the optical absorption measured *in situ* for various organophosphorus-based nerve agent simulants. The novelty of the proposed study is to modify a traditional ultra-sensitive spectroscopic technique, i.e., gaseous and aerosol photoacoustics, by incorporating multiple laser-line sources. Photoacoustic techniques that utilize laser sources routinely measure absorption characteristics of trace gases in the ppb, and are considered among one of the most sensitive spectroscopy methods available (1, 2). Unfortunately, conventional photoacoustic techniques have been greatly limited by the availability of particular laser sources (3). This has been particularly true for infrared (IR) photoacoustic spectroscopy, in which the researcher typically had only a hand full of wavelengths available that were usually produced by cumbersome carbon dioxide ( $\text{CO}_2$ ) and lead salt ( $\text{PbS}/\text{PbSe}$ ) lasers. However, with the advent of the newly developed Quantum Cascade IR laser diode substrates being developed at the U.S. Army Research Laboratory (ARL) and elsewhere, practically any wavelength within 3–14  $\mu\text{m}$  is now readily available.

Our approach is simply to incorporate multiple Quantum Cascade (QC) laser sources in an ultra-sensitive spectroscopic method that has traditionally only used one laser source at a time. By doing so, we intend to measure multiple (three or more) absorption coefficients simultaneously of a given nerve agent simulant in vapor form. We intend to show that a reliable metric will result based on the relationships between the measured absorption parameters that can be used to detect and identify trace species of a given chemically based toxin.

---

## 2. Method

---

Detection of optical absorption using a photoacoustic method is fairly simple. For gaseous photoacoustic spectroscopy, a small-diameter laser beam is modulated at some convenient acoustic frequency, 1 kHz, for example, and is passed through a sealed cylindrical gas cell, often via two or more transmitting windows. The absorbed IR energy raises the absorbing molecules from the ground vibrational state to an excited vibrational-rotational state. Collisional processes then redistribute the energy into translation and rotation, with a resulting increase in the pressure of the gas. The time required for vibrational relaxation to occur at standard temperature and

pressure (STP) is on the order of  $1\text{ }\mu\text{s}$ . The resultant rapid change in pressure at the modulation frequency of the laser results in an acoustic signal that is detected by an electret microphone usually with the aid of a lock-in amplifier. The measured acoustic, or pressure, signal is found to be proportional to the average power of the optical source, the absorption cross-section of the species, and the sensitivity of the electret. The last two parameters are usually known, and one is then interested in measuring the absorption response of the gas at the laser-line.

We have developed a modified flow-through photoacoustic cavity designed specifically to overcome the limited sensitivity inherent in closed-cell designs that use windows to transmit the laser radiation into a photoacoustic cell, as shown in figure 1\* (4, 5).

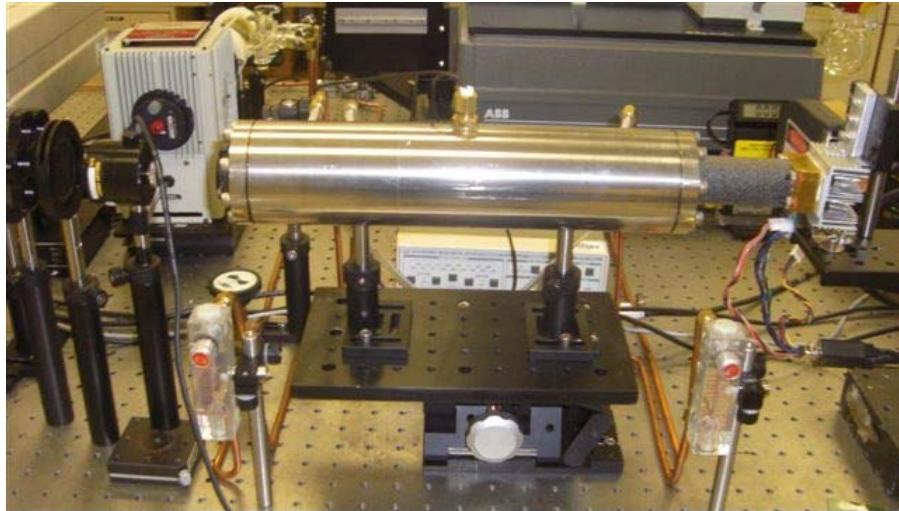


Figure 1. Flow-through photoacoustic cell.

Not seen in the photograph is a series of acoustic dampeners mounted inside the cell at both ends of the tube that serve to suppress any ambient noise. Situated in the center of the cell is a small field-effect transistor (FET) based electret microphone. The faint acoustic signal resulting from the absorbing gas is amplified and fed into a 24-Bit dynamic signal acquisition device that digitizes the analog signal. By accurately digitizing and processing the acoustic signal using a PC, we avoid having to use multiple lock-ins that are usually needed to deconvolve each signal. Instead we conduct a fast Fourier transform (FFT) on the signal and filter only frequency components that correspond to the modulation frequencies of our lasers. Using this approach, we are able to deconvolve up to eight separate laser-induced signals simultaneously with just a single PC.

Initially, we had hoped to use only QC IR laser diode sources that were to be provided by our corporate partner, Maxion Lasers Inc., College Park, MD, but due to production difficulties, we were only provided one QC source (operating at  $8.72\text{ }\mu\text{m}$  with CW power  $60\text{ mW}$  at  $14\text{ }^\circ\text{C}$ ) at

---

\*Often such system are noise limited as a result of residual absorption from the transmission windows that if often greater than the faint acoustic signal resulting from the absorbing species.

the time of this report. In order to move forward with our proof of concept, we procured two other conventional CO<sub>2</sub> laser sources operating at 10.54 and 9.27 μm. The three sources were made coincident and propagated axially through the cell. Each source was modulated at a different acoustic frequency, e.g., 10.35 μm at 1700 Hz, 9.27 μm at 1900 Hz, and the 8.72 μm QC at 1300 Hz.

Examples of the organophosphorus nerve agent simulants considered include diethyl phosphonate (DEMP), dimethyl methylphosphonate (DMMP), and diisopropyl phosphonate (DIMP). Simulant vapor was generated by heating the liquid (low vapor pressure materials), where residual particles were removed by passing the vapor through a condenser that was cooled with liquid nitrogen (LN<sub>2</sub>). Simulant concentrations were varied by mixing with dry air that was pumped through the system at differing flow-rates.

Complete IR absorption spectral for each simulant was simultaneously measured from 3–13 μm by passing the gas sample through a Fourier Transform IR (FTIR) spectrometer monitored transmission cell. This allowed for direct comparison with the three measured absorption coefficients that result from the photoacoustic portion of the study. A simplified schematic of the experiment can be seen in figure 2.

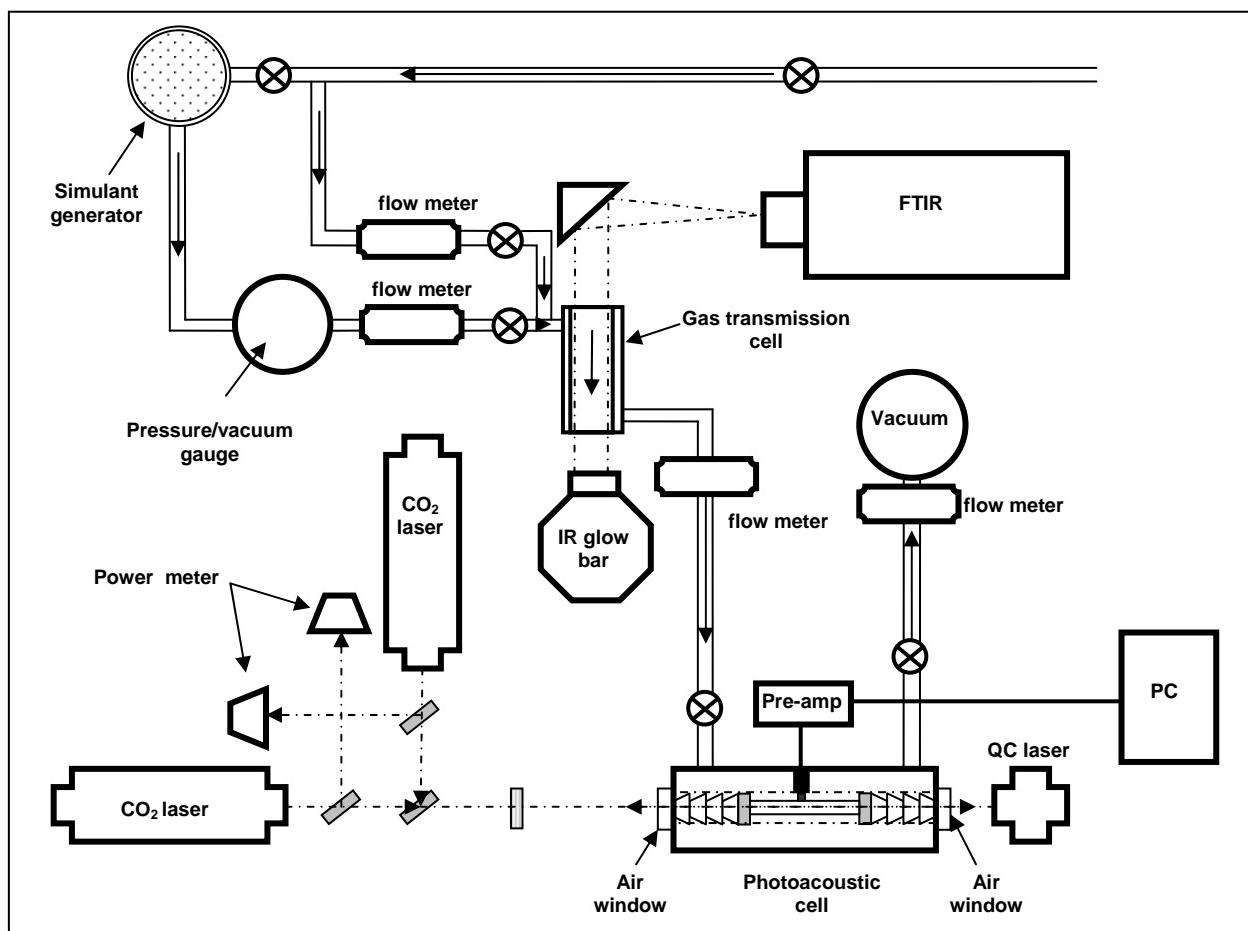


Figure 2. Multi-wavelength photoacoustic test bed.

---

### **3. Preliminary Result/Conclusions**

---

At the time of this report we had just begun testing the specified nerve agent simulants, e.g., DMMP, DEMP, DIMP, etc., and results from those runs must still be analyzed. However, we will show data based on our “practice” vapor, i.e., isopropyl alcohol, in which optimum operating procedures were established. The following figures show the evolution of the raw photoacoustic signal for 8.72  $\mu\text{m}$ , 9.27  $\mu\text{m}$ , and 10.35  $\mu\text{m}$  laser lines, as varying concentrations of isopropyl alcohol are released into the cavity. Figure 3 shows the magnitude of alternating current (AC) component of the acoustic signal for the lock-in synced at 2.5 kHz, i.e., the modulation frequency of the QC laser operating at 8.72  $\mu\text{m}$ . Region 1 highlighted in the figure shows the period just prior to the release of the vapor, and the subsequent signal increase as the simulant enters the active region of the photoacoustic cell. During this portion of the measurement, simulant is heated to about 80 °C (dependent on the vapor pressure), and a pressure of about 2–3 psi is allowed to build in the system. This high concentration of vapor is then leaked at a rate of about 100 ml/min into the FTIR transmission cell and continues to flow into the photoacoustic sample region. A maximum saturation is reached in region 2, at which point we begin to mix the simulant flow with varying concentrations of dry air which reduces the overall concentration, as shown in region 3. The large signal spike seen in region 2 corresponds to opening of valves for the fresh air mixture. We intentionally chose this particular curve to highlight the obvious appearance of acoustic noise seen in the trailing end of the signal in region 3. This noise is apparent in much of the acoustic frequency spectrum above 2 kHz and results from the fluid flowing in the lines. We merely had to adjust our modulation frequencies to avoid the high frequency noise region. Figure 4 shows the corresponding raw acoustic signal for the 10.35  $\mu\text{m}$  CO<sub>2</sub> laser line modulated at 2.1 kHz, where the noise is still present. Figure 5 shows the 9.27  $\mu\text{m}$  signal modulated at 1.7 kHz and a much better noise profile as we move down in frequency.

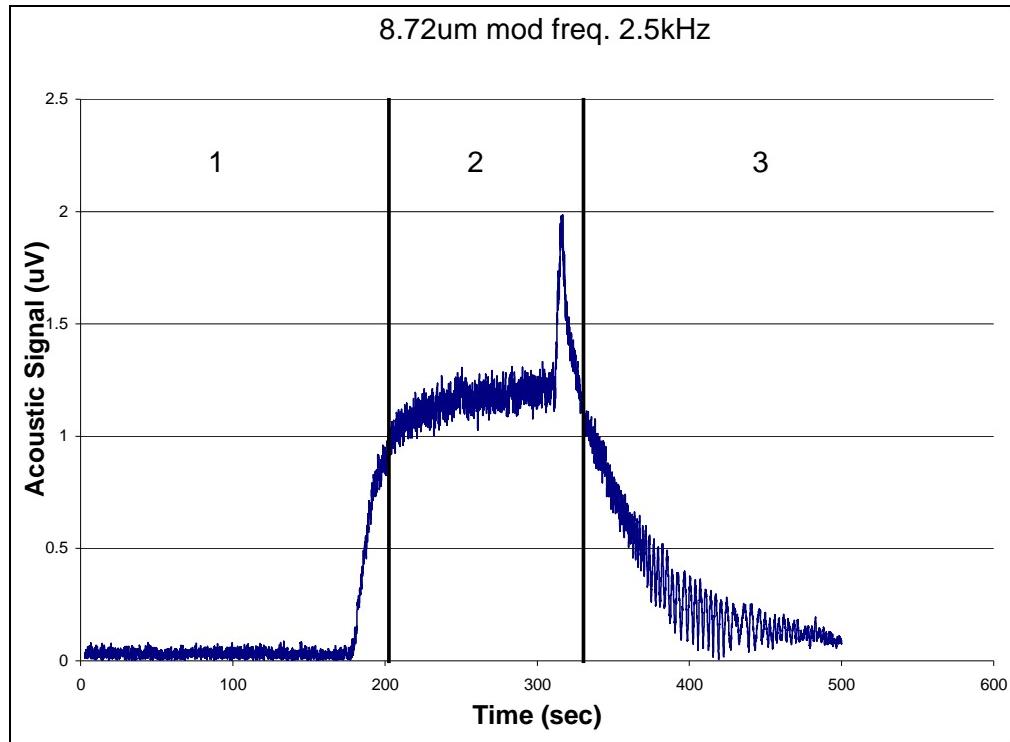


Figure 3. AC component of the electret signal sampled at 2.5 kHz while isopropyl vapor is drawn through the photoacoustic cavity.

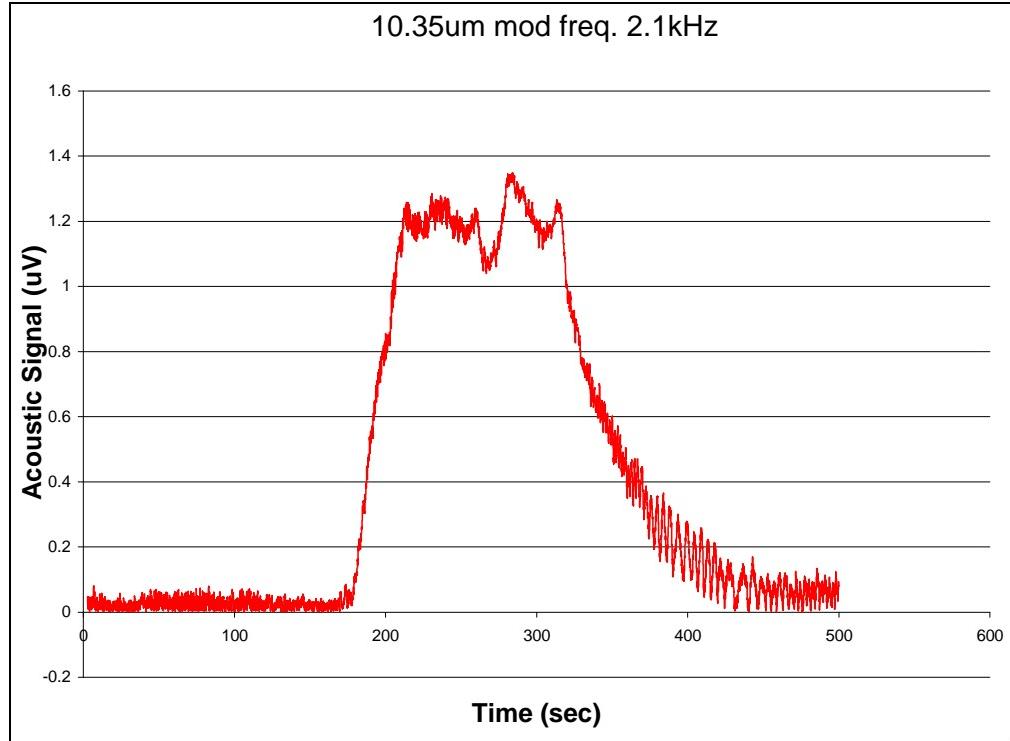


Figure 4. AC component of the electret signal sampled at 2.1 kHz while isopropyl vapor is drawn through the photoacoustic cavity

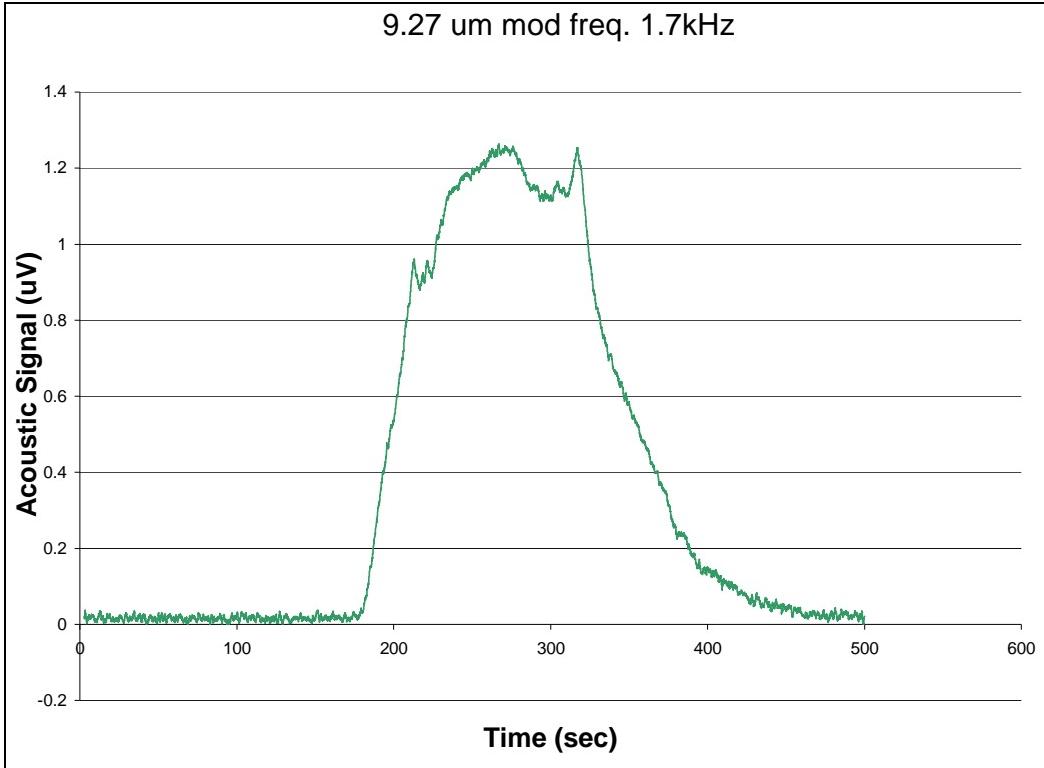


Figure 5. AC component of the electret signal sampled at 1.7 kHz while isopropyl vapor is drawn through the photoacoustic cavity

It is only in region 3 (see figure 3), in which uniform concentrations are acquired, where absorption information is most reliable.

At first glance we were somewhat surprised to see that the relative magnitude for the three signals was about the same (after normalizing for the differing laser powers), i.e., peaking around  $1.2 \mu\text{V}$ . However, after reviewing the absorptance spectra measured by the FTIR, the relative relationships between the three photoacoustics signals appear to be justified, (figure 6).

Currently, by using the multi-wavelength photoacoustic method as described previously, we are accurately measuring the absorption response for a variety of nerve agent simulants. We are investigating several new photoacoustic cell designs to improve optical energy density in the cavity by inducing multiple reflections of the laser beams (figure 7). Similarly, these new approaches will boost signal by reducing unwanted attenuation of the lasers by keeping the laser-gas interaction region small and in close proximity to the electret.

It is our intent to replace the two  $\text{CO}_2$  lasers with QC laser diodes chosen to operate at  $10.10 \mu\text{m}$  and  $9.62 \mu\text{m}$  during the winter of 2009.

Additional work is needed to better quantify simulant concentrations to establish ultimate detectability. Similarly, we need to establish the best metric to use in the detection/identification of a given agent.

A possible “concentration invariant” metric would involve ratios of the integral of the electret signal for a predescribed period of time for each wavelength. For example, during the sampling of a suspect species, we measure three different acoustic signals (one for each of the three wavelengths chosen), and the integral over a time period  $\Delta t$  results in the three independent quantities,  $S(\lambda_1)$ ,  $S(\lambda_2)$ , and  $S(\lambda_3)$ . A three-number metric associated with the species would then be  $\{S(\lambda_1)/ S(\lambda_2)$ ,  $S(\lambda_2)/ S(\lambda_3)$ ,  $S(\lambda_1)/ S(\lambda_3)\}$ .

It is our hope to expend testing to incorporate particulate matter and aerosols, and attempt to distinguish various biological particles based on documented absorption spectra in the mid- and long-wave IR (LWIR) (6, 7).

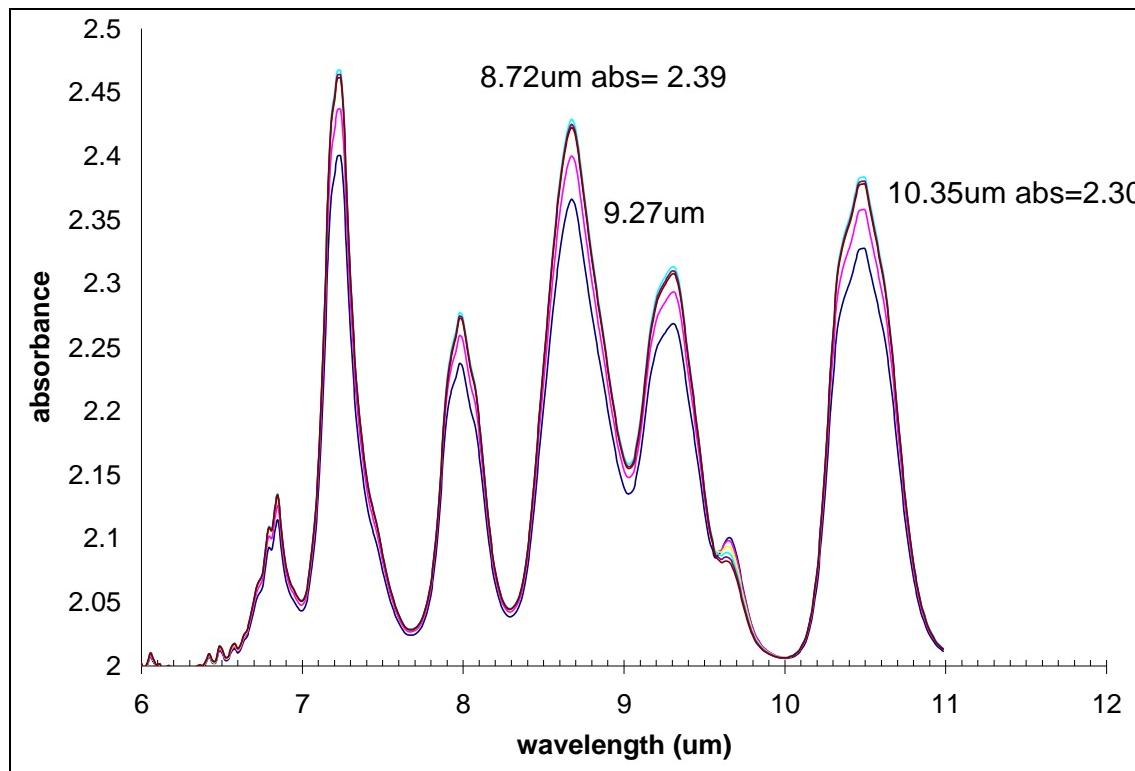


Figure 6. Resultant isopropyl vapor absorptance spectra measured simultaneous with the photoacoustic portion of the study (path length 10 cm). Note that for the laser wavelength chosen that the absorptance are very similar in magnitude, i.e.,  $8.72 \mu\text{m}=2.39$ ,  $9.27 \mu\text{m}=2.29$ ,  $10.35 \mu\text{m}=2.30$ .

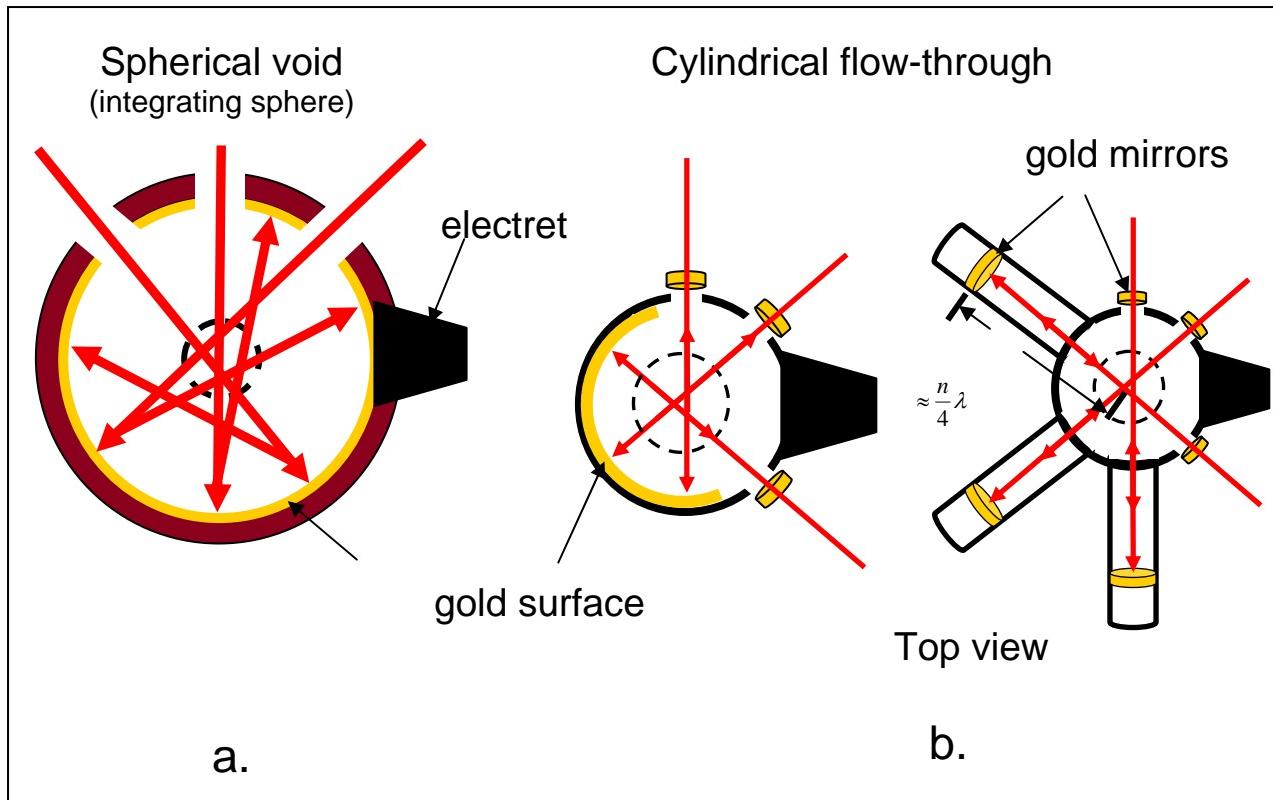


Figure 7. New photoacoustic cell design(s). Design a is based on the multiple reflections inherent in integrating spheres. Design b maintains a cylindrical column of vapor (into the page) but now the lasers are brought into the cell perpendicular to the flow in order to limit unwanted laser attenuation. In addition, the right cell shows possible enhancement of the signal by incorporating resonate effects by spacing opposing mirrors at distances on the order of quarter-multiples of the wavelength of sound associated with each modulation frequency.

---

## 4. References

---

1. Kerr, E. L.; Attwood, J. G. The Laser Illuminated Absorptivity Spectrophone: A Method for Measurement of Weak Absortivity in Gases at Laser Wavelengths. *Appl. Opt.* **1968**, (7), 915.
2. Bruce, C. W.; Gurton, K. P.; Stromberg, T. F. Trans-Spectral Absorption and Scattering of Electromagnetic Radiation by Diesel Soot. *Appl. Opt.* **1991**, 30 (12), 1537–1546.
3. Kreutzer, L. B. Ultralow Gas Concentration Infrared Absorption Spectroscopy. *J. Appl. Phys.* **1971**, 42, 2934.
4. Gurton, K.; Felton, M.; Dahmani, R.; Ligon D. In Situ Aerosol Spectroscopy for a Variety of Nerve Agent Simulants Using Flow-through Photoacoustics. *Applied Optics September 2007*, 46 (25), 6323–6329.
5. Gurton, K.; Dahmani, R.; Ligon, D.; Bronk, B. In Situ Measurement of the optical Absorption and Extinction for Chemical and Biologically Derived Aerosols Using Flow-through Photoacoustics. *J. of Applied Optics July 2005*, 44 (19), 4001–4006.
6. Helm, D.; Naumann, D. Identification of Some Bacterial Cell Components by FT-IR Spectroscopy. *FEMS Microbiol. Lett.* **1995**, 126, 75–80.
7. Gurton, Kristan P.; Ligon, David; Kvavilashvili, Ramaz. Measured Infrared Spectral Extinction for Aerosolized *Bacillus subtilis* var. *niger* endospores from 3 to 13  $\mu\text{m}$ . *Applied Optics-OT September 2001*, 40 (25), 4443–4448.

---

## **List of Symbols, Abbreviations, and Acronyms**

---

AC	alternating current
ARL	U.S. Army Research Laboratory
CO <sub>2</sub>	carbon dioxide
DEMP	diethyl phosphonate
DIMP	diisopropyl phosphonate
DMMP	dimethyl methylphosphonate
FET	field-effect transistor
FFT	fast Fourier transform
FTIR	Fourier Transform IR
IR	infrared
LN <sub>2</sub>	liquid nitrogen
LWIR	long-wave IR
PbS/PbSe	lead salt
QC	Quantum Cascade
STP	standard temperature and pressure

No. of Copies	Organization	No. of Copies	Organization
1 ELEC	ADMNSTR DEFNS TECHL INFO CTR ATTN DTIC OCP 8725 JOHN J KINGMAN RD STE 0944 FT BELVOIR VA 22060-6218	1	PM TIMS, PROFILER (MMS-P) AN/TMQ-52 ATTN B GRIFFIES BUILDING 563 FT MONMOUTH NJ 07703
1	DARPA ATTN IXO S WELBY 3701 N FAIRFAX DR ARLINGTON VA 22203-1714	1	US ARMY INFO SYS ENGRG CMND ATTN AMSEL IE TD F JENIA FT HUACHUCA AZ 85613-5300
1 CD	OFC OF THE SECY OF DEFNS ATTN ODDRE (R&AT) THE PENTAGON WASHINGTON DC 20301-3080	1	COMMANDER US ARMY RDECOM ATTN AMSRD AMR W C MCCORKLE 5400 FOWLER RD REDSTONE ARSENAL AL 35898-5000
1	US ARMY RSRCH DEV AND ENGRG CMND ARMAMENT RSRCH DEV AND ENGRG CTR ARMAMENT ENGRG AND TECHNLGY CTR ATTN AMSRD AAR AEF T J MATT BLDG 305 ABERDEEN PROVING GROUND MD 21005-5001	1	USAFA ARMSTRONG LAB EDGEWOOD RDEC ATTN SCBRD RTE J R BOTTIGER ABERDEEN PROVING GROUND MD 21005-5432
1	EDGEWOOD CHEMICAL BIOLOGICAL CTR ATTN AMSRD ECB RT DP A C SAMUELS ATTN AMSSB RRT DP R VANDERBEEK 5183 BLACKHAWK RD BLDG E-5554 ABERDEEN PROVING GROUND MD 21010-5424	1	US GOVERNMENT PRINT OFF DEPOSITORY RECEIVING SECTION ATTN MAIL STOP IDAD J TATE 732 NORTH CAPITOL ST NW WASHINGTON DC 20402
1	ERDEC RESEARCH & TECHNOLOGY DIRECTORATE ATTN SCBRD RTB D ANDERSON 5183 BLACKHAWK RD BLDG E3724 ABERDEEN PROVING GROUND MD 21010-5423	1	US ARMY RSRCH LAB ATTN AMSRD ARL CI OK TP TECHL LIB T LANDFRIED BLDG 4600 ABERDEEN PROVING GROUND MD 21005-5066
1	ERDEC RESEARCH & TECHNOLOGY DIRECTORATE ATTN SCBRD RTB W ADAMS 5183 BLACKHAWK RD BLDG E5830 ABERDEEN PROVING GROUND MD 21010-5423	1	DIRECTOR US ARMY RSRCH LAB ATTN AMSRD ARL RO EV W D BACH PO BOX 12211 RESEARCH TRIANGLE PARK NC 27709
		6	US ARMY RSRCH LAB ATTN AMSRD ARL CI ES K GURTON ATTN AMSRD ARL CI ES M FELTON ATTN AMSRD ARL CI OK PE TECHL PUB ATTN AMSRD ARL CI OK TL TECHL LIB ATTN AMSRD ARL SE EE R TOBER ATTN IMNE ALC HRR MAIL & RECORDS MGMT ADELPHI MD 20783-1197

TOTAL: 20 (1 ELECT, 1 CD, 18 HC)

INTENTIONALLY LEFT BLANK.